

Which spacer you may need...

In some installation, you may require additional height to get better access to the release button on the [surface base](#), because your counter has a lip to contain the liquid or objects during transport. We have a solution to help you to get a better installation for your surface base.

Here are the spacer heights for different installation you may need.

Counter lip height (inch)	Surface base height	Spacer required in inch	Part no.
1/4 "	1—1/4"	3/8 "	800-00-SP038
3/8 "	1—1/4"	3/8 "	800-00-SP038
1/2 "	1—1/4"	3/4 "	800-00-SP034
3/4 "	1—1/4"	3/4 "	800-00-SP034
1"	1—1/4"	1-1/4 "	800-00-SP114